

# Thank You for contacting ThunderMax product support.

## How to Upgrade Firmware-

Link to ECM and in the Main Menu of your software go to:

• Help->Module Upgrade History

lax-ModuleContro	ICenter Window	Help	THP Production	Development				
AutoTune			Technical Documentation					
o.o ms o.o deg			TMax Installation Manual (pdf)					
nsient Fuel	Base Ignition T							
0.0 ms	0.0 deg		TMax Tuning Manu	al (pdf)				
ector PW	Idle Error Dire		Install/Repair USBSE	R Driver (Require	d for TMax LINK)			
0.0 ms	0.0		LICESEE Driver Insta	llation Doc (ndf)				
Throttle Pos.	Run Time		USDSER Univerinstallation Doc (pdf)					
).0 deg	0.0 Sec		Open Device Manag	jer / View Installe	d Adapters			
or Duty Cycle	TAC Idle Pos		Online Help Docum	ents				
0.0 %	0.0		TMax WebSite					
ear Trim	AFR Fron		THE TEDORE					
0.0 %	0.0 AFR		Collect TMax Support Data					
ead Temperature	AFR Rea		Transmit TMax Supp	port Data				
0 deg F	0.0 AFR		Manager TMay Surgery Data					
emperature	Idle Error		Manage Tiviax Supp					
0 deg F	0.0		About TMaxI_TunerPlus					
etric Pressure	Interp X	0	Module Upgrade Hi	story				
0 In Hg	0.0	-		9	0.0			
ttle Velocity	Interp Y		Vre	ef1 (	MAT (Raw)			

Here you will be able to see which version of the firmware you are currently running.















Now in the Main Menu go to:

### • Configure->Firmware->Check for Firmware Upgrade

ear	t   - Monitor View				_				
s	Configure Monitoring TMax-AutoSupport	TMax-N	1oduleContro	lCenter	Window	Help	THP Pro	duction [	
	Firmware		Check for Firmware Upgrade					1	
	Product Configuration	•	Upgrade I	Upgrade Module Firmware Now			F	0.0	
	Autonize Product		Convert S	S20 to B20				Peak Transi	
	Closed Loop MODULE Settings	T*	10		0.0 009			0.0	
	MODULE Settings	→ or	PW	Idle Error Direction				Throttle P	

#### From the list, choose the file marked "Latest Version" and click OK.

Once the firmware has been downloaded successfully you will be prompted to "Upgrade Module Firmware Now" using this file.

To do this, in the main menu go to:

#### • Configure->Firmware->Upgrade Firmware Now

ols	Conf	figure Monitoring	TMax-AutoSupport	TMa	x-ModuleContro	olCenter	Window	Help	THP P	roduction	
		Firmware		•	<ul> <li>Check for Firmware Upgrade</li> </ul>						
		Product Configuration		2	Upgrade Module Firmware Now						
		Authorize Product	prize Product		Convert S	S20 to B20		L	Peak Trans		
		Closed Loop MODU	losed Loop MODULE Settings		1110			0.0			
		MODULE Settings	DDULE Settings		or PW	Idle Error Direction				Throttle F	

When finished, a window will appear that says "*Firmware Upgrade Complete*". Click **OK** and you are done.



THUNDERMAX 12:0 INDUSTRIAL DRIVE VHITE NOUSE TH 37 IR SUPPORTOTHUNDER MAXED WWW.THUNDER MAX.com To Thunder Maxed

