


How to Set Idle RPM

1. Expand the **Module Configuration** item.
2. Select **Basic Settings**.

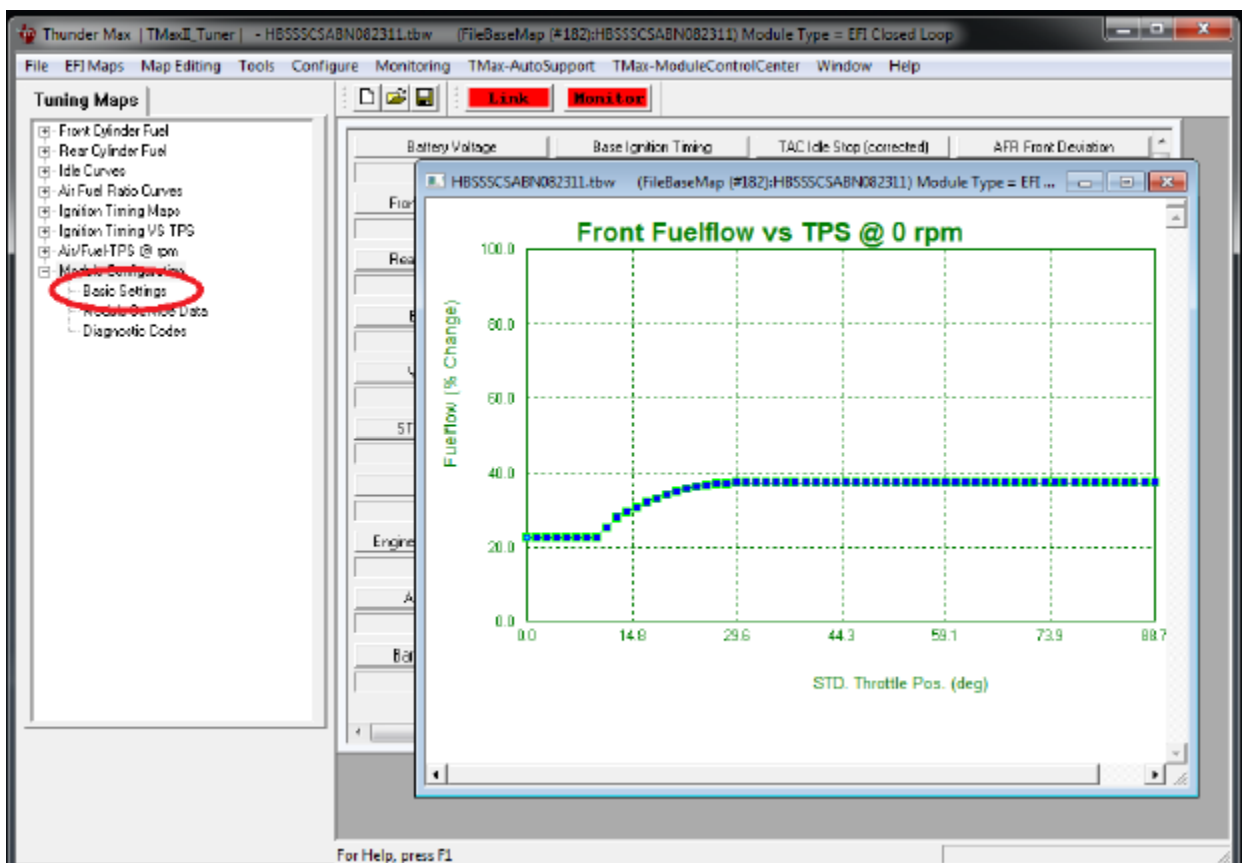

3. Select The **Idle Rpm** button and set using the slide bar.

