


## How to Set Idle RPM

1. Expand the **Module Configuration** item.
2. Select **Basic Settings**.

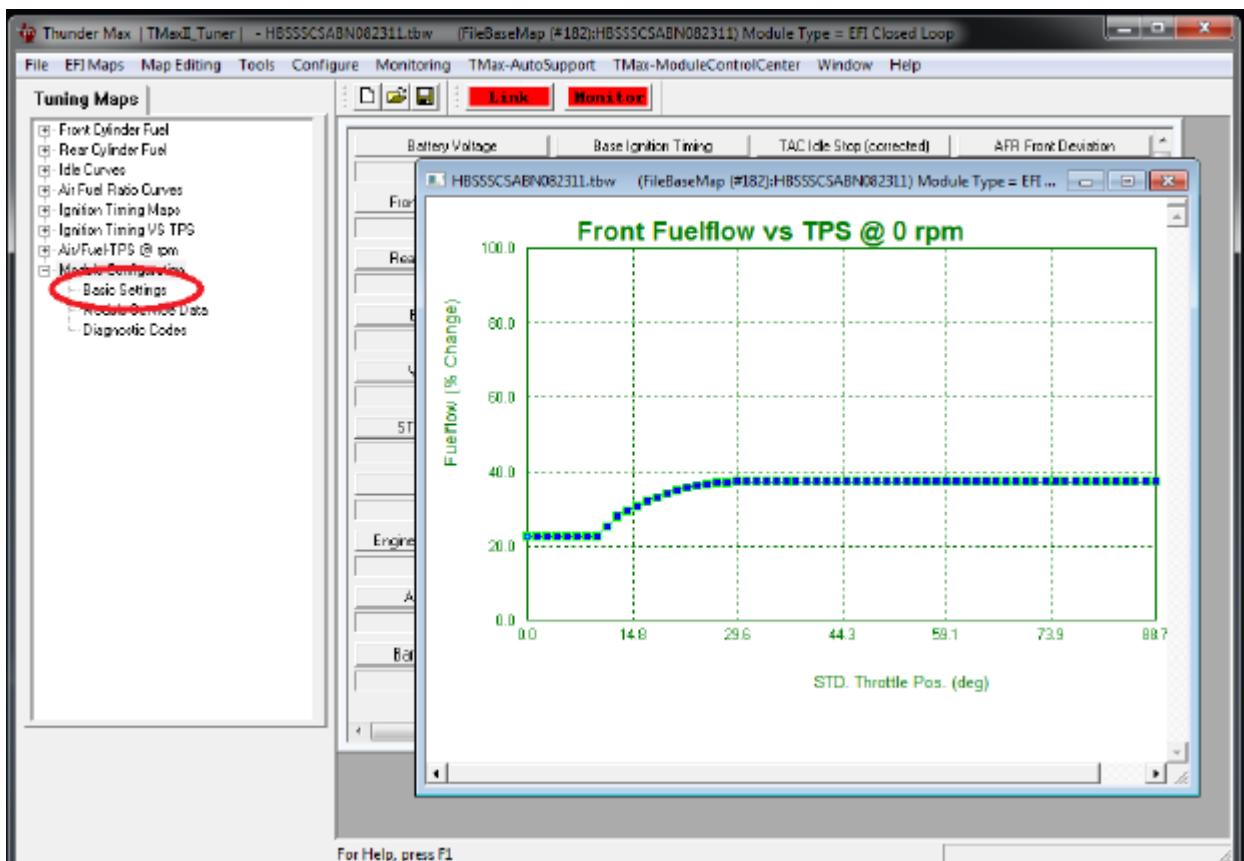



# HOW TO:



3. Select The **Idle Rpm** button and set using the slide bar.



THUNDERMAX  
120 INDUSTRIAL DRIVE  
WHITE HOUSE, TN 37188

SUPPORT@THUNDER-MAX.COM  
WWW.THUNDER-MAX.COM  
@ THUNDERMAXEFI

