





Updating your TMaxl / SmartLink Software



How to update your software

Note: You must have an active Internet connection

- 1. Open your TMax or SmartLink software
- 2. Select Main Menu→Configure→SmartLink Update <or> TMaxI Software Update
- 3. Follow the update dialog prompts to complete.

NOTE: Keeping your software up to date, provides access to new maps and new Module Firmware.

1				-	Thund	er Ma	ax TMaxII_1	Funer	- Untitled
File	EFI Maps	Map Editing	Tools	Configure	Nonitor	ing TN	Max-AutoSuppo	ort TMa	x-Trouble Shoc
	Firmware Upgrading Options								Auto
	Product Co	onfiguration)))) (#)
	Authorize I	Product							ap (#1
	Closed Loop MODULE Settings								@ 0 1
	MODULE Settings. (Nitrous, SuperCharger, ReverseGear, Comp Release, AAT Ser								•
(TMaxI Software Update								
	Open Windows Device Manager / View Installed Adapters Disable Software Auto Update Check								•
	Enter Module Access Code								
	Enter VIN (Vehicle Identification Number) ThunderMax Product Registration								
~	Force Default AutoTune Temp Settings								
					10.0				

NOTE: Keeping your software up to date, provides access to new maps and new Module Firmware.

