

Updating your TMaxI / SmartLink Software




How to update your software

Note: You must have an active Internet connection

1. Open your TMax or SmartLink software
2. Select Main Menu→Configure→SmartLink Update <or> TMaxI Software Update
3. Follow the update dialog prompts to complete.

NOTE: Keeping your software up to date, provides access to new maps and new Module Firmware.

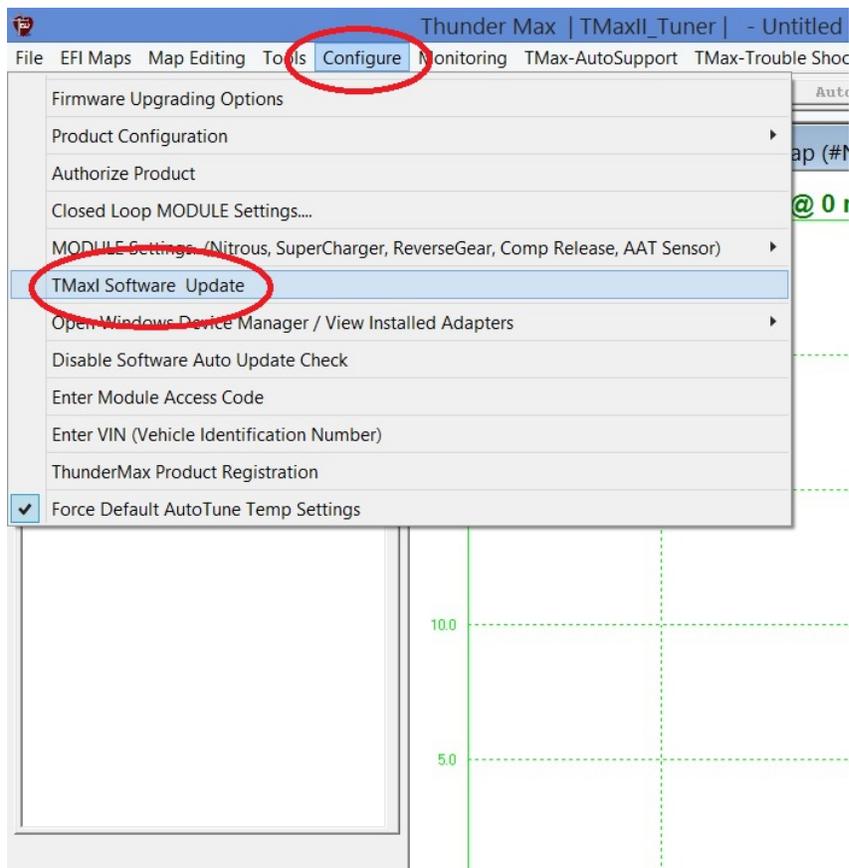

NOTE: Keeping your software up to date, provides access to new maps and new Module Firmware.